

TAKO | TAKO SLIM

PL INSTRUKCJA MONTAŻU I EKSPLOATACJI

CZ NÁVOD NA MONTÁŽ A ÚDRŽBU

SK NÁVOD NA MONTÁŽ A ÚDRŽBU

EST PAIGALDUS- JA KASUTUSJUHEND

LT MONTAVIMO IR EKSPLOATAVIMO INSTRUKCIJA

LV MONTĀŽAS UN EKSPLUATĀCIJAS INSTRUKCIJA

DE MONTAGE- UND AUFBAUANLEITUNG

RO INSTRUCȚIUNI DE MONTAJ ȘI OPERARE

HU SZERELÉSI ÉS ÜZEMELTETÉSI ÚTMUTATÓ










UA ІНСТРУКЦІЯ З МОНТАЖУ І ЕКСПЛУАТАЦІЇ

BY ІНСТРУКЦЫЯ ПА МАНТАЖЫ І ЭКСПЛУАТАЦЫІ

RU ИНСТРУКЦИЯ ПО МОНТАЖУ И ЭКСПЛУАТАЦИИ

EN INSTRUCTIONS FOR ASSEMBLY AND USE

FR INSTALLATION ET UTILISATION - MODE

											
		1	2	3	4	5	6	7	8	9	
TAKO	80X80X16 90X90X16	■	3	12	3	3	6	3	0*	0*	0**
	80X80X16 90X90X16	■	3	12	3	3	6	3	0*	0*	0**
	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	0**
	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	0**
	100X80X4 120X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	0**
TAKO SLIM	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	1
	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	1

PL

*Możliwość dokupienia nóżek S907-003
** Syfon brodzikowy Ø90 TAKO S904-006

CZ

*Možnostnákupunohou S907-003
**Sprchovávanícasifon Ø90 TAKO S904-006

SK

*Možnosťkúpných S907-003
**Sprchovávanícasifon Ø90 TAKO S904-006

EST

*Võimalusjalguosta S907-003
**Dušialusesifoon Ø90 TAKO S904-006

LT

*Galimybėjisgytikojų S907-003
**Dušopadeklosifonas Ø90 TAKO S904-006

LV

*Iespējaiegādātieskājas S907-003
**Dušasteknessifons Ø90 TAKO S904-006

DE

*MöglichkeitBeinezukaufen S907-003
**Duschwannensiphon Ø90 TAKO S904-006

RO

*Posibilitatea de a cumpărăpicioare S907-003
**Sifon cu tavă de duș Ø90 TAKO S904-006

HU

*Lehetőséglábakvásárlására S907-003
**Zuhanytálcasifon Ø90 TAKO S904-006

UA

*Можливістьпридбанняножок S907-003
**СифондлядушовоголоткаØ90 TAKO S904-006

BY

*Магчымысцьнабыцьножкі S907-003
**Душавыпаддон, сифон Ø90 TAKO S904-006


RU

*ВозможностькупитьножкиS907-003
**ДушевойподдонсифонØ90 TAKO S904-006






EN

*Possibility to buy legs S907-003
**Showertraysiphon Ø90 TAKO S904-006


FR

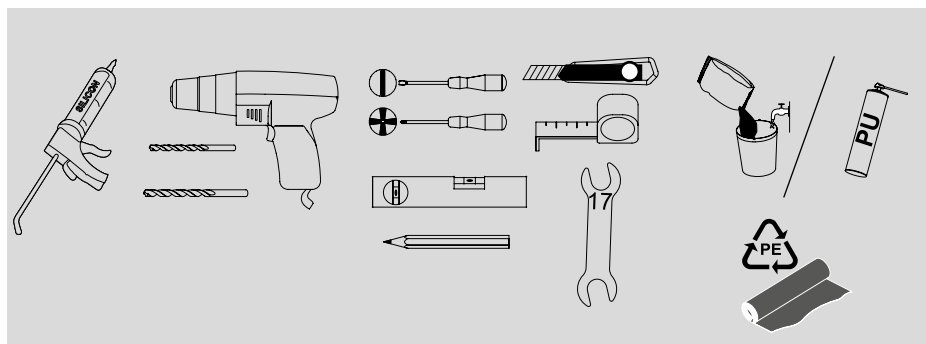*Possibilitéd'acheter des jambes S907-003
**Siphon pour receveur de douche Ø90 TAKO S904-006

1. | TAKO

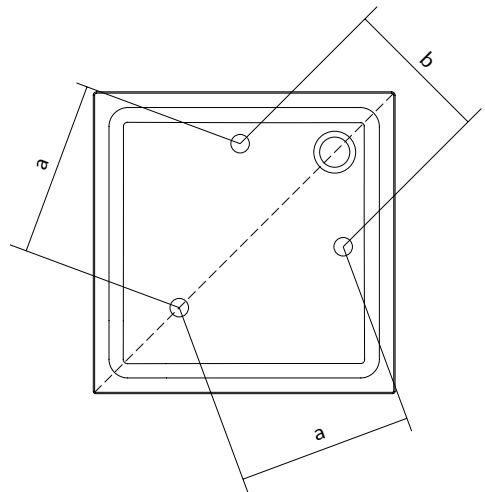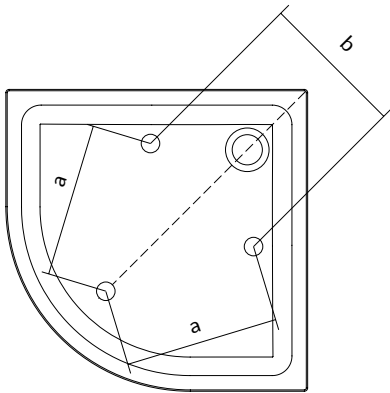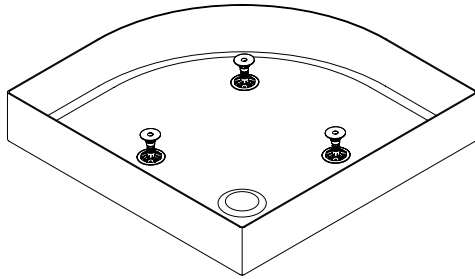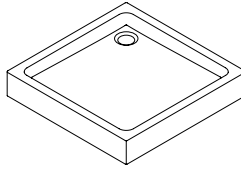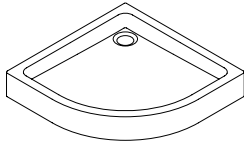


	mm	
	a	b
80 x 80 x 16	350	260
90 x 90 x 16	450	375
80 x 80 x 16	420	300
90 x 90 x 16	495	300

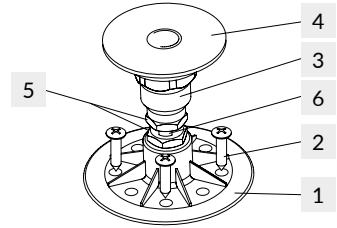


2. | TAKO





1

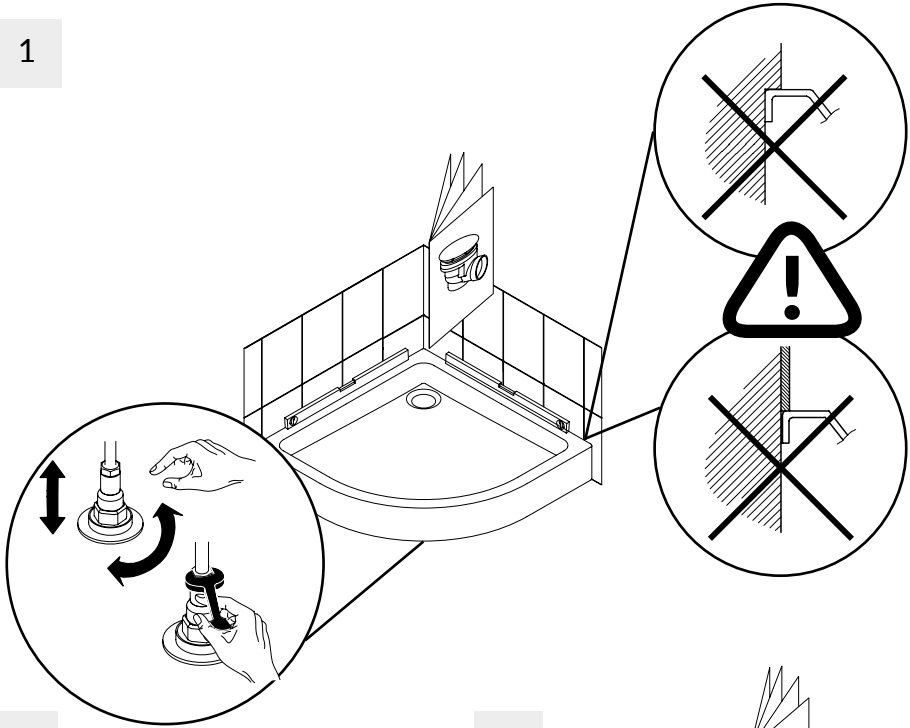

2

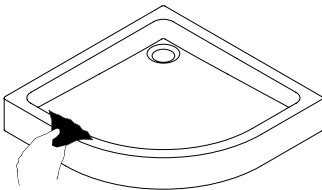



3

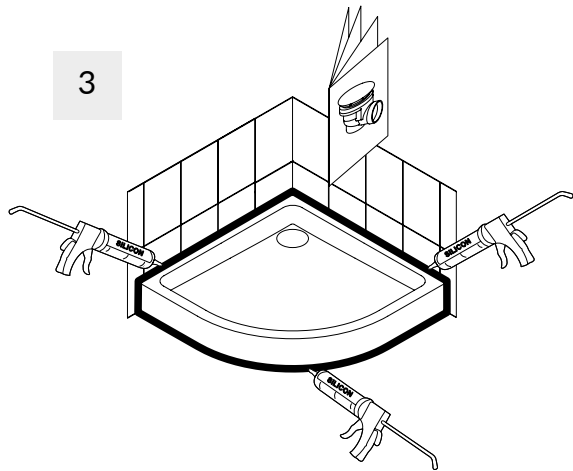


1. | TAKO | TAKO SLIM




1

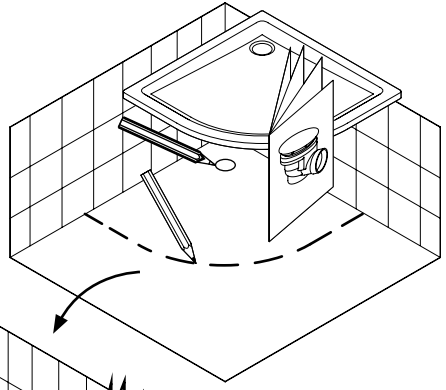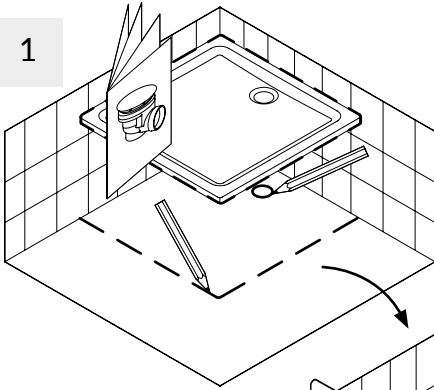

2

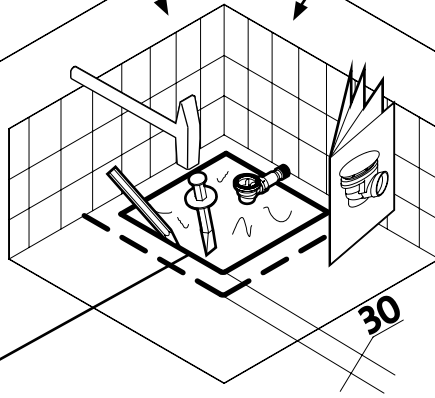


30

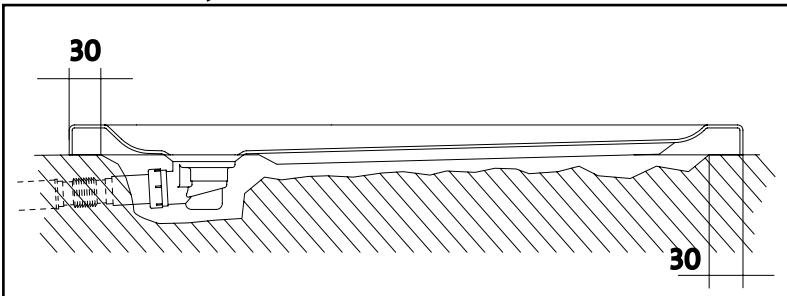


30

3

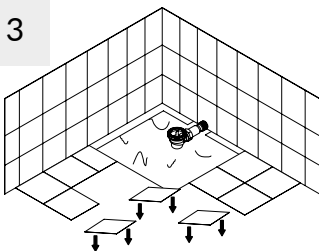


4

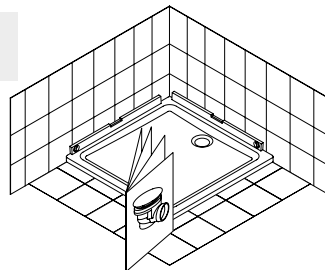


2. | TAKO | TAKO SLIM




1

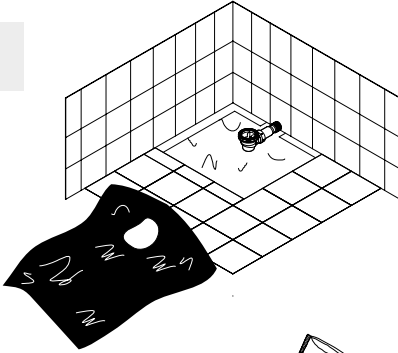

2

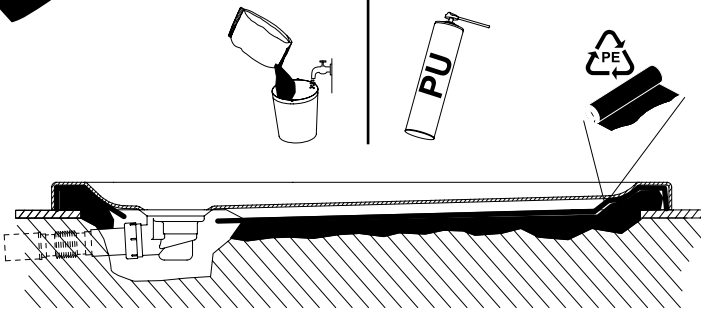


3

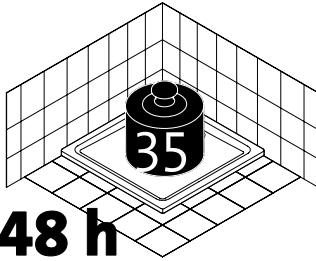


48 h



4

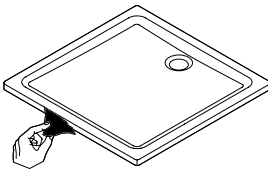



5

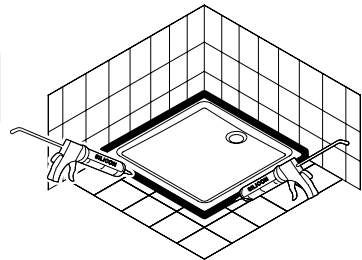










24h

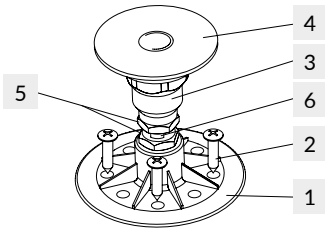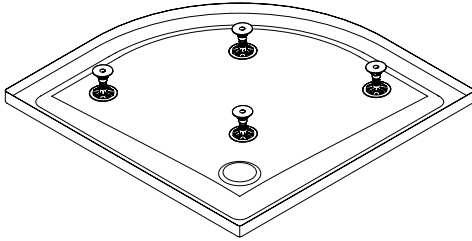

3. | TAKO | TAKO SLIM + S907-003








		mm		
		a	b	c
80 x 80		300	340	
90 x 90		445	445	
80 x 80		675	450	500
90 x 90		715	470	550
100 x 80 x 4		790	520	570
120 x 90 x 4		970	560	780

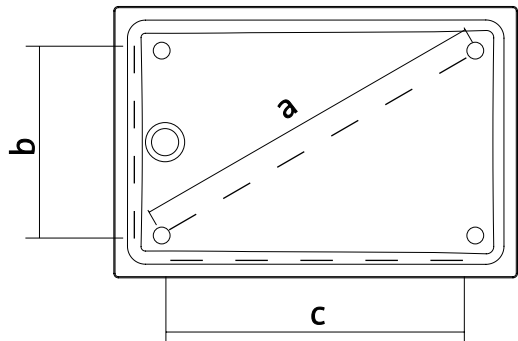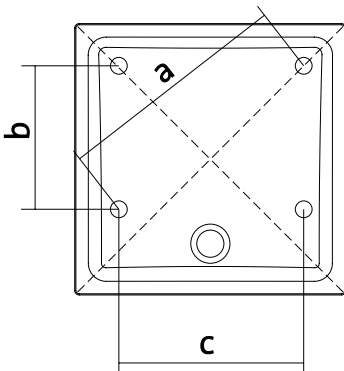
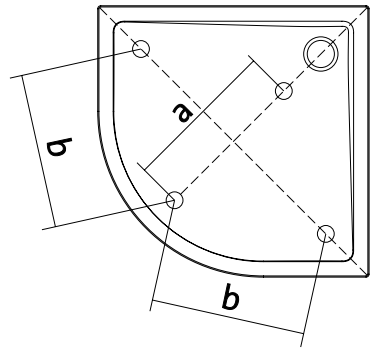


5. | TAKO | TAKO SLIM

1

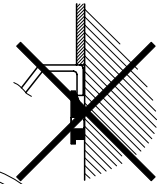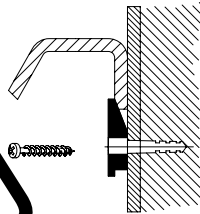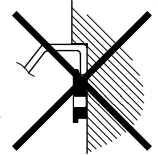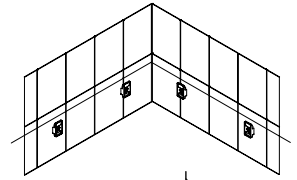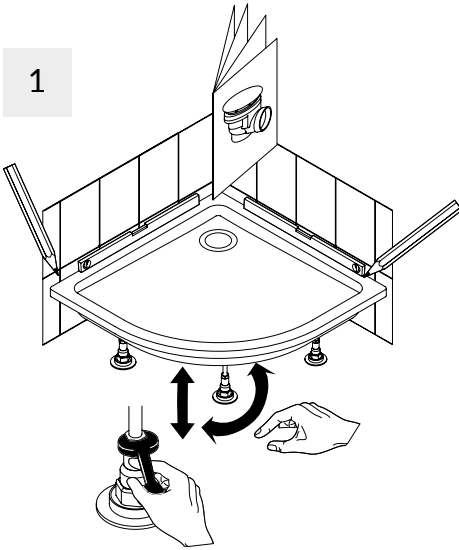

2

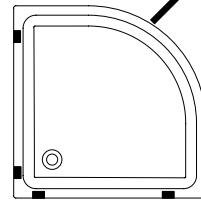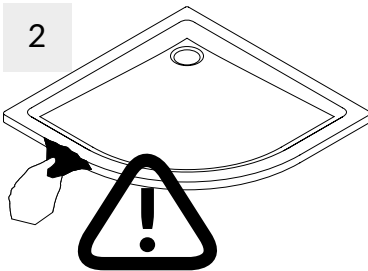

3

